

# **'XD' TOP MOUNT**

# **INSTALLATION INSTRUCTIONS**



Phone: (844) 740-1260 Fax: (866) 266-1399 Email: <u>tigress@easternmetal.com</u>

# Installation of your pair of Tigress 'XD' Top Mounts.

When installing your pair of 'XD' Top Mounts on a <u>Canvased T-Top</u>, a mounting plate for both Left/Port and Right/Starbord sides are required and both running fore and aft and between the brace-bars of the T-Top. (See Figure 1 on Page 4)

If there are No mounting plates, you can purchase them from your local Tigress dealer and have them welded in! Any Fabricated plates should be strong and welded on at least 3 sides and well braced!

The x4 Holes of any mounting plates need to be square to the T-Top structure so that Outriggers point straight back to the stern.



TIGRESS MOUNTING PLATES

Part #OOMP-30 (30"Long) #OOMP-20 (20"Long)

(See PAGE 4)

When installing your pair of 'XD' Top Mounts on a Hard Top. (See Figure 2 on Page 4).

## Index.

What's included in the 'XD' Top Mount Kit - Page 1. Pre-Installation, Mounting Plate Notes - Pages 2 & 4. Mounting Holes Template – Page 3. T-Top & Hard Top Mounting Notes – Page 4. Hand Clearance Options – Page 5. Before you can mount – (Step 1.) Page 6. STD OP-Lever setting – (Step 2.) Page 6. Changing the OP-Lever Orientation – (Steps 3-9.) Pages 6-8. Install the Mounts in the Tower – Page 4. Installing the OP-Levers – (Steps 11-12.) Pages 8-9. Locking system testing – (Step 13.) Page 9. Install the trim-Rings – (Steps 14-15.) Page 9. Install the Logo-Filler – (Step 16.) Page 10. 'Extra' Hand Clearance OP-LEVER (Steps 17-25) Pages 10-12.

## Cleaning your 'XD' Top Mounts.

After each use rinse off your 'XD' Top Mounts and Outriggers thoroughly with fresh water. Use of a Bio-degradable Mild detergent is acceptable but always rinse off after their use! DO NOT USE CAUSTIC CLEANING CHEMICALS or WAXES AS THEY CAN PROMOTE CORROISON AND DAMAGE THE COMPONENTS FINISHES & MATERIALS! **XD TOP MOUNT - TEMPLATE** 



#### PLATE & EXTRUSION T-TOP MOUNTING.

On the underside of the 'XD' Top Mount's plate, put a Bead of silicon around all x4 .315" (8mm dia.) holes, a bead around the large hole and the plates footprint, then carefully enter the End-Cone into and down thru. the 3-1/8" mounting plate hole aligning directly on top of the x4 holes that are pre-placed in the T-Top Canvas. (that are aligned with the mounting plate holes). Slightly grease the suggested Button-Head fasteners threads, install and tighten with a 3/16" Hex Allen key wrench.

Note: **Solid Plate**. Use the supplied template for hole layout/location.

T-TOP CANVAS

#### HARD-TOP MOUNTING.

MOUNTING PLATE

For Solid fiberglass Hard-Top mounting, carefully mark out noting/using the supplied hole template pattern and drill the 5/16" Dia. Thru. Holes and the Large center 3-1/8" Diameter hole.

**Soft-Core or Hollow core Tops** require the use of Spacers, Typically are 7/16" in OD and always cut to length so they are flush with Both Top and Bottom Hard-Top Surfaces. Silicon bead sealing is required as per the above Plate & Extrusion recommendation!

#### WEDGE PLATES.

Silicon sealing beads are required on both faces of the Wedge plates to keep water from Passing through to under the Hard Top!



USE SPACERS FOR SOFT-CORE OR HOLLOW CONSTRUCTION HARD TOPS.

FLAT S-STEEL WASHERS w/SPRING-WASHERS/NUT OR NYLOC NUTS \*+NYLON WASHERS



**End-Cone** 

Figure 2.



TIGRESS 'XD' BACKING PLATE. (AL) (optional, but recommended)

Part # 88932 (5" x 6.25" x .250")

\* THE RECOMMENDED USE OF NYLON WASHERS <u>UNDER FLAT WASHERS</u> IS TO PREVENT 'MARRING' OF THE ANODIZED ALUMINUM PLATE & ELECTROLYTIC ACTION BETWEEN THE DISSIMILAR METALS!



## STEP 1. HAS TO BE DONE <u>BEFORE</u> MOUNTING THE TOP MOUNT IN A BOATS T-TOP OR HARD TOP!

#### **STEP 1. REMOVING 'TRIM-RINGS'**

Remove the XD TOP MOUNT from the packaging, place on a soft nonmarring surface and with a medium sized Posi-drive screwdriver remove both 'Trim-Ring' screws and 'Trim-Rings' from the Top Mount. Place the parts somewhere safe for later re-assembly.

2. ONLY DO STEPS **3** TO **9** IF YOU <u>WANT TO CHANGE</u> THE OP-LEVER ORIENTATION RELATIVE TO THE UPPER-ARM/OUTRIGGER !

NOTE: STD. IS THE LEVER & UPPER ARM BOTH FACING/POINTING TO STERN!

## STEP 3. CHANGING THE OP-LEVER ORIENTATION.

#### Note: THIS CAN ALSO BE DONE AFTER MOUNTING IN THE TOWER!

With a Small flat-bladed screwdriver, remove the Logo Filler Cap from the end of the Stainless-Steel Cone!

## STEP 4. REMOVE THE 7mm NYLOC NUT.

Using a 11mm Hex Socket undo CCW and completely remove the Nyloc nut, thrust washer and Large Spring from the end of the Cone.



### STEP 4. Continued.

With the parts shown removed, place them somewhere clean and safe.

## STEP 5. REMOVE THE END CONE.

Remove the End-Cone by simply sliding it off of the end of the Top Mount Assembly. Note: Keep the Upper-Arm still !

## STEP 6. ADD A LITTLE LUBE!

Smear some extra Marine grade lithium type grease onto the x8 'Spline' teeth shown! You can also apply some grease to the x24 'Locking-Teeth' recesses shown!

#### STEP 7. OP-LEVER ORIENTATION.

#### YOU HAVE x8 CHOICES OF OP-LEVER ORIENTATION!

Simply turn the End-Cone, align and Engage with the x8 'Spline' teeth to suit your particular Towers configuration. <u>Shown</u> is a 90deg Op-Lever turn (CW) relative to the Upper-Arm/Outrigger of the RH/Starbord Top Mount.



STEP 8. Fully Slide on the End-Cone. Ensure the Teeth are Fully Seated! CHECK THAT THE UPPER ARM DIDN'T MOVE!

## Re-install the Parts removed in STEP 4.

- a. Insert the Large Spring.
- b. Install the Thrust Washer.
- c. Thread on the 7mm Nyloc nut. CW.

## STEP 9. Setting the 7mm Nyloc Nut.

Using a <u>11mm</u> Hex socket wrench. <u>Important Note:</u>

The nut isn't done up tight, it is <u>only</u> set so that 1/16" – 3/32" of stud endthreads are showing from the nut end!

#### STEP 10. INSTALL THE MOUNTS IN THE TOWER.

If you changed the Lever orientation for both LH/RH units (Step 3. thru. 9) on a workbench..

#### Then next Refer to Page 4 PLATE & EXTRUSION T-TOP MOUNTING.

Then after install undertake Steps 11 – 17.

## STEP 11. INSTALLING OP-LEVERS. Only after the Mounts are installed!

Insert the OP-Lever's into the opening of the End-Cone. Slide in all the way until the Pivot-Housing touches the End-Cone.

Lightly Pre-lube the fastener threads and finger start both into the End-Cone.

**Pivot-Housing** 



## STEP 12. TIGHTEN 5mm FASTENERS.

Using the supplied 4mm Hex wrench, tighten up both of the Levers 5mm fasteners.

Don't overtighten or you can strip the Hex drive of the fastener!

#### STEP 13. LOCKING SYSTEM TESTING.

To test the locking system **1.** Simply pull down on the Black OP-Lever grip as far as it goes, when holding it down it disengages the locking teeth and enables turning of the End-Cone by **2.** swinging the OP-Lever either direction which turns the Upper Arm assembly..thus an Outrigger too!

Visually check that the locking teeth clear each other as the End-Cone turns. (There is always a slight gap between). Re-engagement of the Locking teeth in any of the 24 Locking positions is done by letting go of the OP-Lever. Note: If the OP-Lever doesn't return all the way back up..it is because the Locking teeth didn't align. Just Simply push on the Side of the Lever until the Teeth re-engage!

#### STEP 14. INSTALL THE TRIM RINGS.

Engage both of the Trim Ring halves with the groove in the Lower Body. They only go on one way up and a 1/16" gap will always be visible. You can rotate them to your preferred position.

#### STEP 15. INSTALL (2) SELF-TAPPING SCREWS

With a small Posi-drive screwdriver install both of the Trim-Ring screws that you had removed in Step 1. DO NOT OVERTIGHTEN OR YOU WILL STRIP THE TRIM-RING THREADS!



## STEP 16. PUSH IN THE LOGO FILLER

Align the Logo Text to the desired orientation and Push in with your thumbs Making sure it seats evenly all around!

NOTE: IF IT DOESN'T PUSH IN ALL THE WAY UP TO THE END-CONE FACE.. <u>IT IS</u> <u>BECAUSE THE 7mm NUT WASN'T SET</u> <u>DEEP ENOUGH IN STEP 9. = RESET IT.</u>



# **'EXTRA' HAND CLEARANCE OP-LEVER.**

Especially in thick Hard Top mounting applications and when Wedge Plates are also installed, by Inverting the Lever Handle it <u>increases</u> the Hand-Clearance under the Hard Top by an <u>extra</u> **1-5/8**" over the STD Lever setting!

Follow Steps 17 thru. 26. To convert from an STD Clearance Setting to an 'Extra' clearance setting!

#### STEP 17. STD OP-LEVER SETTING.

SHOWN IS THE STD LEVER SETTING! BOTH OP-LEVER ASSEMBLIES IN THE 'XD' TOP MOUNT KIT ARE SET THIS WAY!



#### STEP 18. REMOVE THE PIVOT-PIN.

With a Medium sized Flat bladed screwdriver, undo (CCW) and completely remove the Pivot-Pin from the Pivot-Housing and set it aside!

![](_page_9_Picture_13.jpeg)

## STEP 19. SLIDE OUT & ROTATE.

- i. Pull the LEVER-BLADE Out of the Pivot-Housing.
- ii. Holding the Pivot Housing still, Rotate the Lever Blade ½" turn (180deg.) as shown.
- iii. Completely slide the Lever-Blade back in to re-align for the Pivot-Pin and the white Lever bushing. The Black Lever-Grip will now be temporarily at the Bottom.

## STEP 20. INSTALL THE PIVOT-PIN.

Re-install the Pivot-Pin from the Counterbored side of the Pivot-Housing and tighten it up (CW). The Head will end up being flush with the body!

## **STEP 21. CHANGE LEVER GRIP POSITION.**

With a medium Posi-drive screwdriver Undo and remove both side fasteners From the OP-Lever Assembly.

## STEP 22. SLIDE BACK THE LEVER-GRIP

Hold the Pivot-Housing tightly with one hand and with your other hand Pull the Lever-Grip in the direction shown all the way until the Lever-Grip comes of the Lever-Blade.

#### CAUTION:

## DO NOT USE LEVERS OR SCREWDRIVERS TO PRY OFF OR DAMAGE WILL OCCUR! NO VICE CLAMPING EITHER!

If anything use a Wooden drift and 'Bump' the end of the Lever-Grip!

![](_page_10_Figure_14.jpeg)

#### PAGE 12/13

#### STEP 23. ROTATE LEVER-GRIP TO TOP

With the Lever-Grip detached, Rotate it  $\frac{1}{2}$  turn (180deg.) to the Lever-Blade as shown.

![](_page_11_Picture_3.jpeg)

#### STEP 24. SLIDE LEVER-GRIP BACK ON.

Slide it all the way back on from the open-ended end which in turn re-engages the 'Inner-Nose' feature back into the Lever-Blades opening! Both of the side fastener holes should be in alignment!

#### STEP 25. RE-INSTALL SIDE FASTENERS.

Lube the threads of the Side fasteners and re-install and Hand tighten them!

![](_page_11_Picture_8.jpeg)

![](_page_11_Picture_9.jpeg)

## STEP 26. INSTALL THE OP-LEVER IN THE <u>'XD' TOP MOUNT</u>

With the XD Top Mount already installed in the T-Top or Hard Top follow: **STEPS 11-16. to complete the install!** 

![](_page_11_Picture_12.jpeg)

#### **UPPER-ARM ADJUSTMENT**

The UPPER-ARM Adjusts In **10 Degree Increments.** It Starts from the Horizontal/Laydown Rest position.

#### 1. UNDO THE KNOB.

If an Outrigger is installed, then 1<sup>st</sup> support the Arm. Undo the 3-Lobed knob CCW approx.

1-1/4 to 1-1/2 turns.

#### 2. DETENT ACTION.

#### (w/KNOB undone 1-1/4 to 1-1/2 turns CCW)

In this knob setting you will noticeably feel a Detent action as you alter the Upper-Arm angle, this is so you know where each of the 10 degree index positions are as they click by!

This is the ideal approach at changing Upper-Arm & Outrigger angle and less likelihood that the Locking teeth aren't correctly aligned before retightening the knob!

#### 3. RETIGHTEN THE KNOB (CW – Clockwise).

At the desired Upper-Arm angle, retighten the 3-Lobed knob. Hand Tight is sufficient.

<u>Note.</u> A Spring washer will start compressing as you tighten the last 1/8<sup>th</sup> turn of the Knob.

# UNLOCKING, OUTRIGGER DEPLOYMENT & LOCKING – In 15 Degree Increments.

#### 1. UNLOCKING.

**PULL DOWN** on the Black OP-LEVER until it stops! <u>HOLD that position!</u>

 SWING OUT the OP-LEVER to the LEFT (for Port) When either using the actual Outrigger as a reference position for your preferred Trolling position/angle <u>or</u> the OP-Levers actual position relative to the Tower,
RELEASE ....once you have deployed just RELEASE pressure on the <u>OP-Lever</u> and the integral Return-Spring will re-engage the Locking teeth.

**Notes:** The OP-LEVER will return to the Level position if the Locking systems teeth are correctly engaged! If the Lever has lots of UP/DOWN movement then just push the side of the OP-LEVER and it will engage!

4. RETURN OP-LEVER TO THE RUN POSITION. Perform 1 thru. 3 but Swing the OP-Lever in the opposite direction Back to the OP-Levers Run Position.

![](_page_12_Picture_19.jpeg)

**Example.** The Left/Port unit's Upper-Arm is deployed OUT 45 degrees to the Tower.

![](_page_12_Picture_21.jpeg)