


**LABEL BACKLIGHTING:**  
 PANEL IS PRE-WIRED FOR 12V SOURCE.  
 FOR 24V SOURCE, MOVE RED JUMPER  
 TO TABS LABELED "+24".



**SPARE INDICATOR LED:**  
 ON-INDICATING LED FOR FUTURE EXPANSION BREAKER.  
 CONNECT BLACK LEAD TO LOAD SIDE OF BREAKER,  
 CONNECT WHITE LEAD TO AC NEUTRAL BUS.

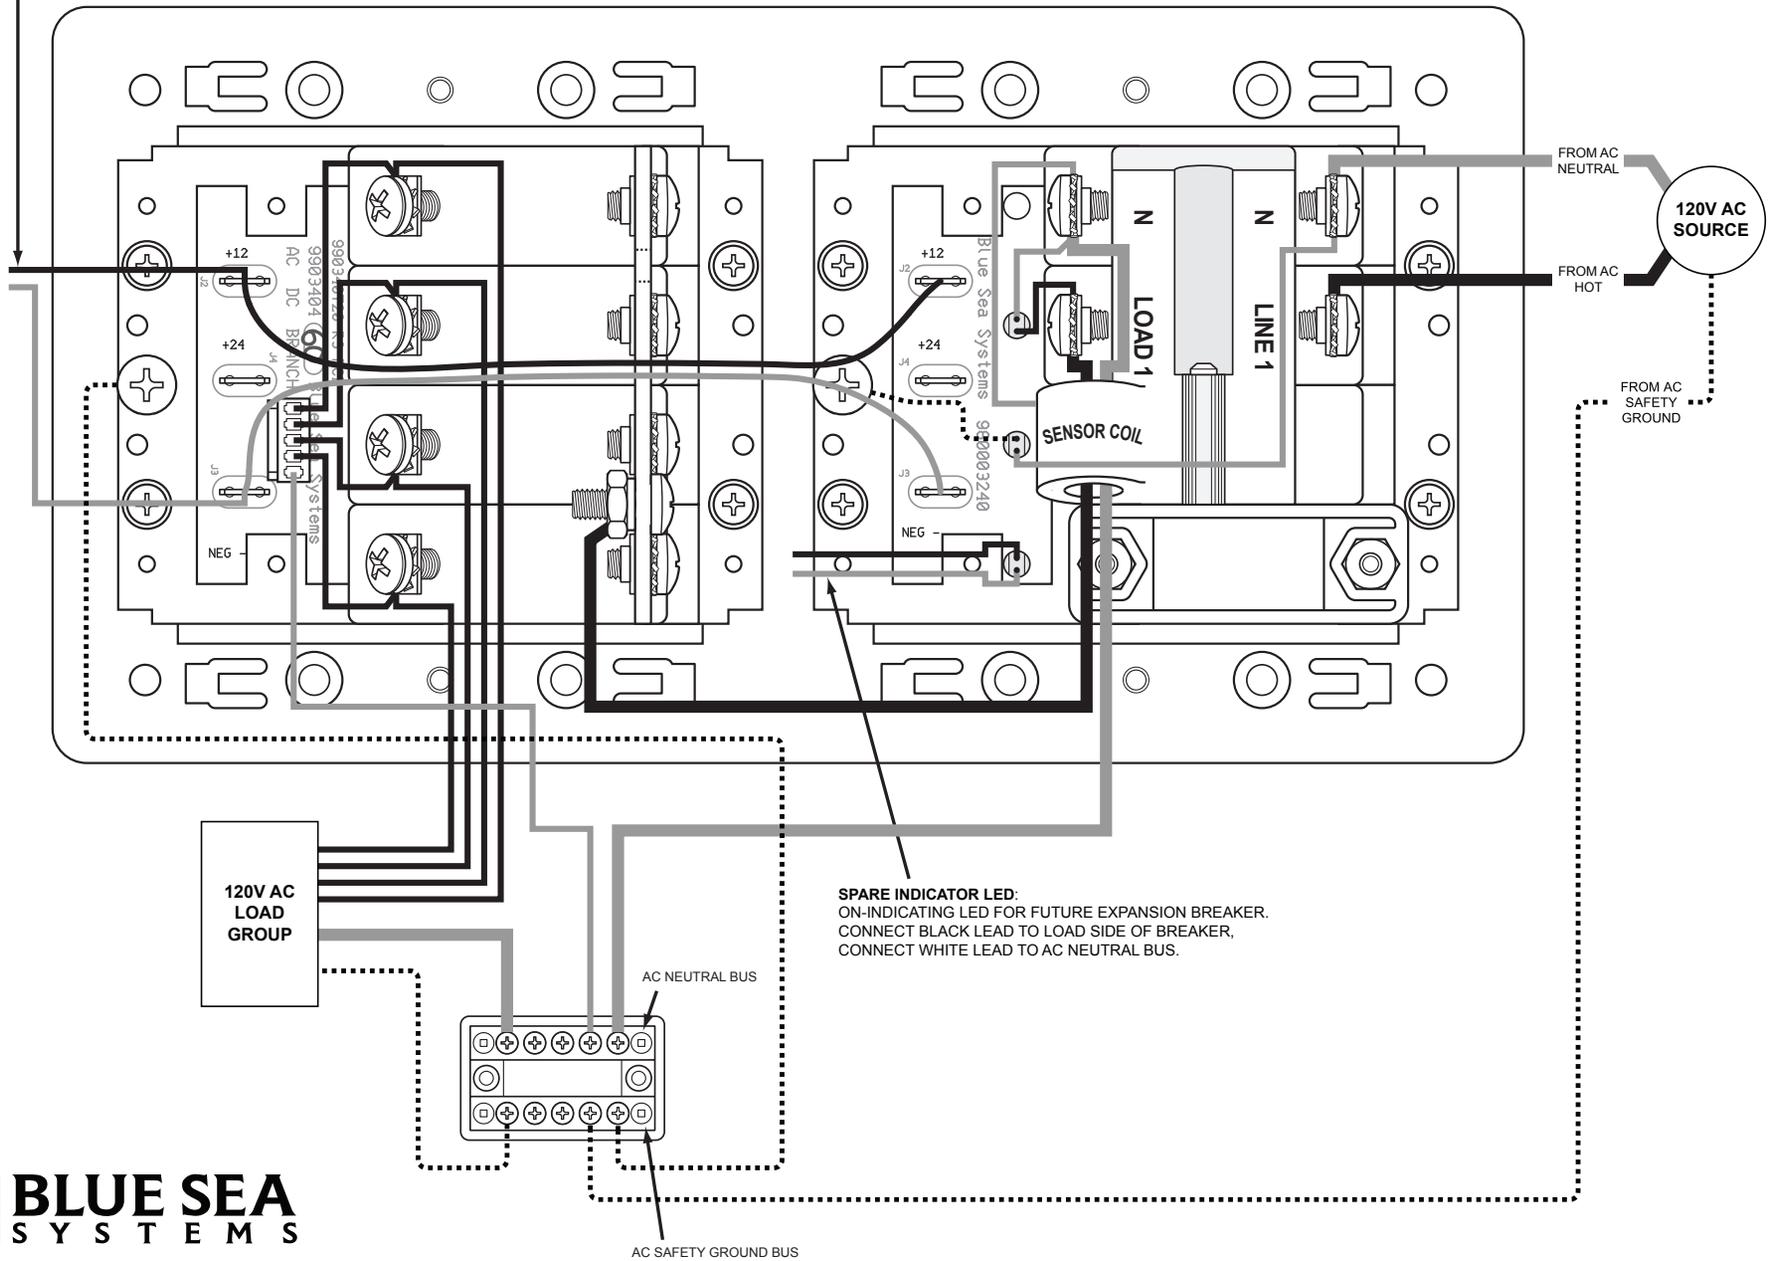

425 Sequoia Drive  
 Bellingham, WA 98226  
 p: 360.738.8230  
 p: 800.222.7617 USA and Canada  
 f: 360.734.4195  
 conductor@blueseas.com  
 www.blueseas.com

**1193 Panel Wiring Schematic**  
 ELCI Main + 5 Positions Horizontal Panel