

## Item Number

RAM-VB-191 & RAM-VB-191-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

**Vehicle base for the**  
Chevrolet Silverado (2014)

## SPECIFICATIONS

### Placement

Across Transmission Hump

### Drilling Required

No - uses existing console bolts on vehicles

### Seat Configuration

Bucket/Bench. Base will not work in vehicles with full console that extends up to dash.

### Construction/Finish

Steel/Black Powdercoat

### Dimensions

A = 16.875", B = 10", C = 3.75"

### Pole or Pedestal

Ordered Separately

### Weight

6.7 lbs.

## Notes.


This base may not work with the factory installed center console or with 4WD or manual transmission levers that are on the floor. Some models may have factory installed accessories that prevent installation. This base is designed to be installed over the transmission hump. Full length consoles will prevent installation.

### National Products, Inc.

8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



Complete Vehicle Mount  
RAM-VB-191-SW1

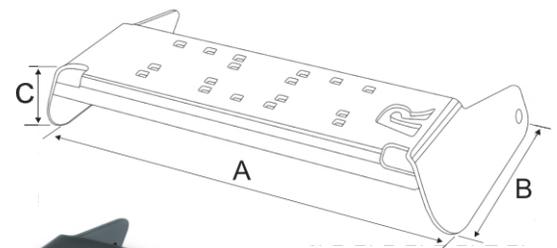

Vehicle Base  
RAM-VB-191



## Item Number \_\_\_\_\_

RAM-VB-191 & RAM-VB-191-SW1



# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the Chevrolet Silverado (2014)

### INSTALLATION INSTRUCTIONS

1. Place both front seats in their most rear position.
2. Remove the plastic trim caps using a small screw driver. These are located at the lower front of the center seat/console. Store and save these covers for later use should the base be removed.
3. Using a 15MM socket, remove the bolts found under the plastic trim caps. Store and save these bolts for later use should the base be removed.
4. Place one of the supplied steel tube stand off's inside each opening over the threaded hole.
5. Place the no drill base so that it bridges the center hump. Align the holes in the no drill base with the stand off's on each side of the console.
6. Place the flat washer over the M10 bolt, place through the no drill base and stand off. Start thread by hand.
7. Using a 17MM socket, fully tighten the no drill base so it is secure.

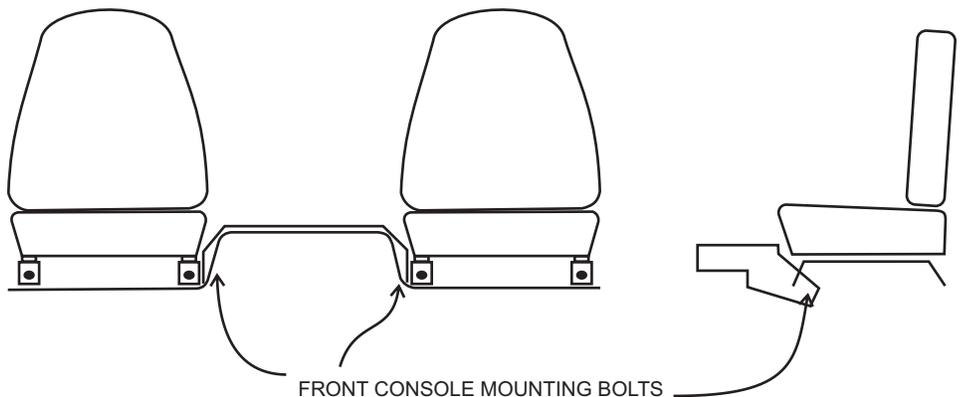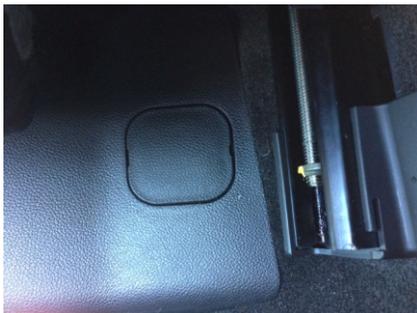

**National Products, Inc.**  
8410 Dallas Ave S  
Seattle, WA 98108  
Phone: (206) 763-8361  
Fax: (206) 763-9615  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

