


SEAVIEW

ELEVATE YOUR ELECTRONICS

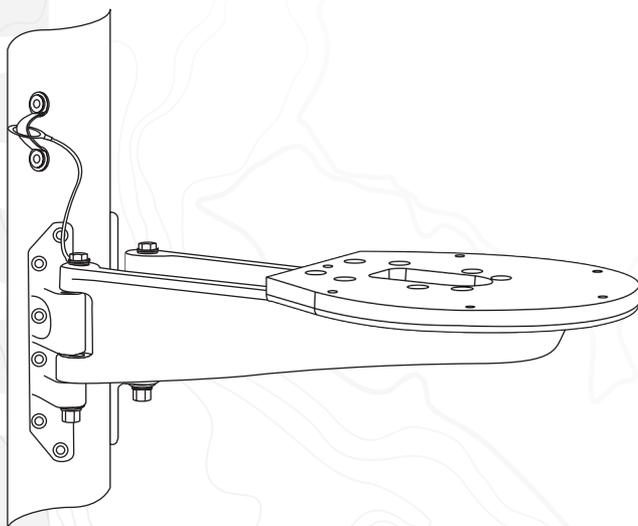

INSTALLATION INSTRUCTIONS


For Seaview Mast Mount:

SM14F3


Refer to website for most up to
date instructions and videos.

WWW.SEAVIEWGLOBAL.COM

PARTS INCLUDED

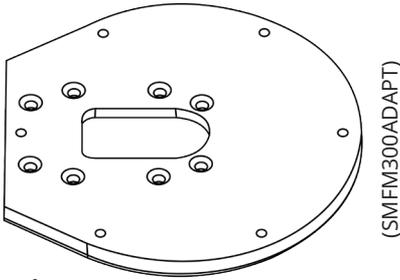

x1

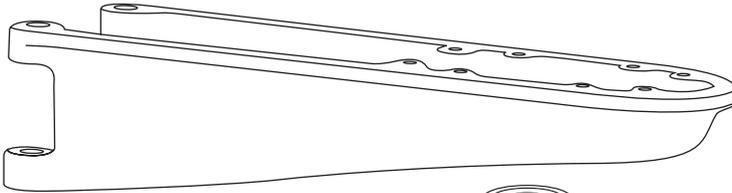


x1
(SM18MOD)




x6
(M6NNUT)




x2
(3816NUT)

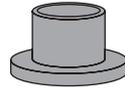

x12
(SMMBLRB/ BLACK)

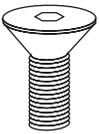

x8

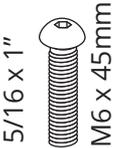


x6



x6
(14NW nylon washer)




x2
(3/8 Nylon Flat Washer)

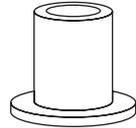

x10
(38SBMM 3/8 shoulder bushing)




x1
(SMMBR-2)

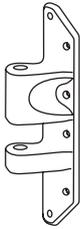

x1
(SMMBL-2)



x6
(M6 S.S. Washers)

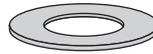


x3
(M10 S.S. WASHER)




x1
(PMGRO2)



x12
(3/16 S.S. Rivet)

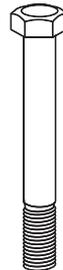

x2
(3/8-16 x 5")

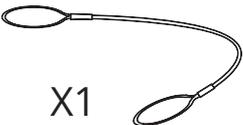

x1




x1

TOOLS NEEDED






Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com

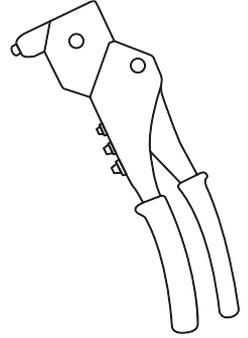


5/16" = 8mm




3/16" = 4.7mm

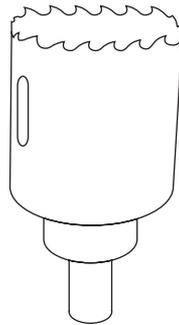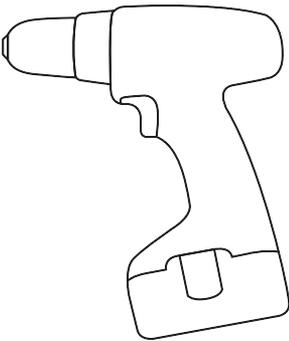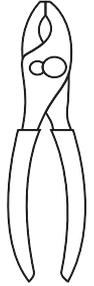


15/16" = 25mm

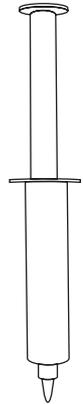

Tef-Gel or Equivalent

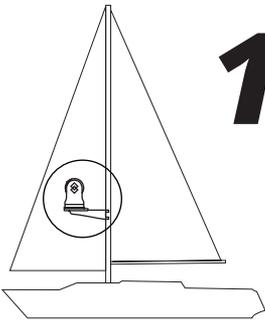


1A

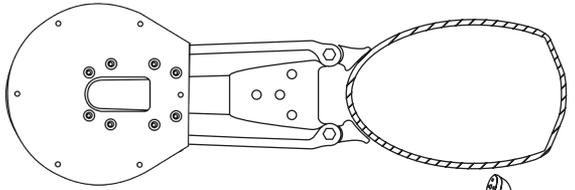


SM-AD-ISO

1B

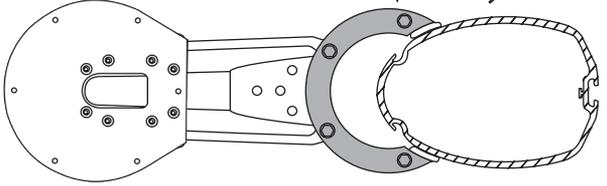


2

SM14F3 Mast Mount foot assembly.

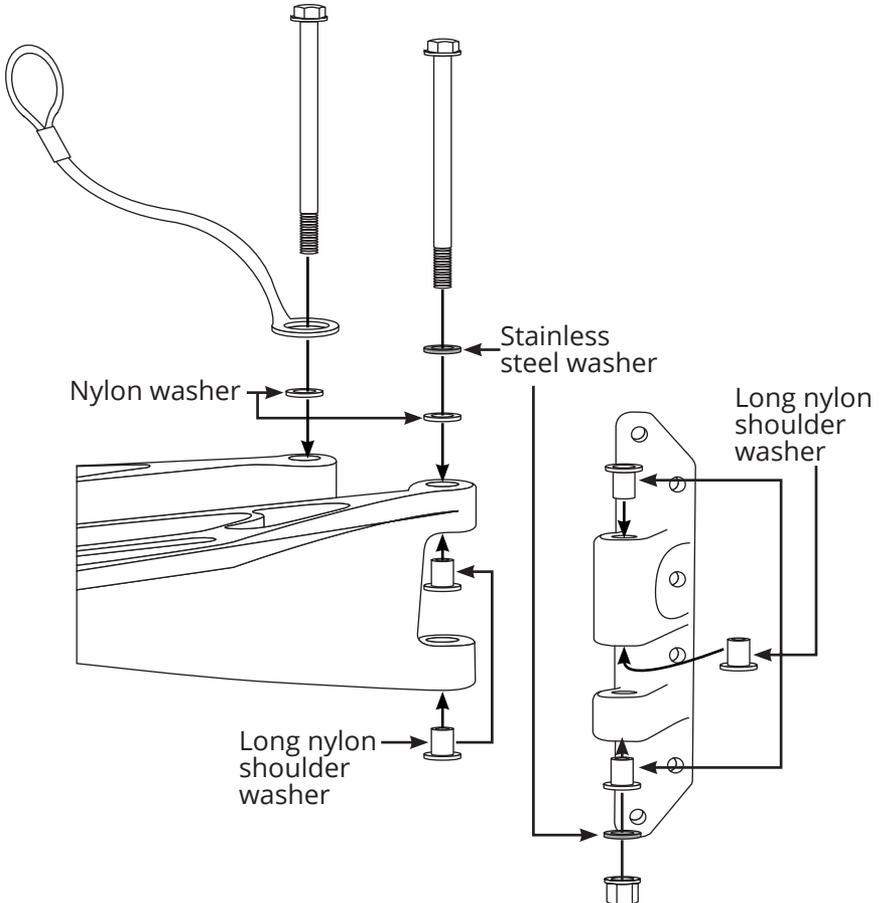


3

Apply marine adhesive sealant to the eight shoulder washers, then insert them into the mast mount as shown.

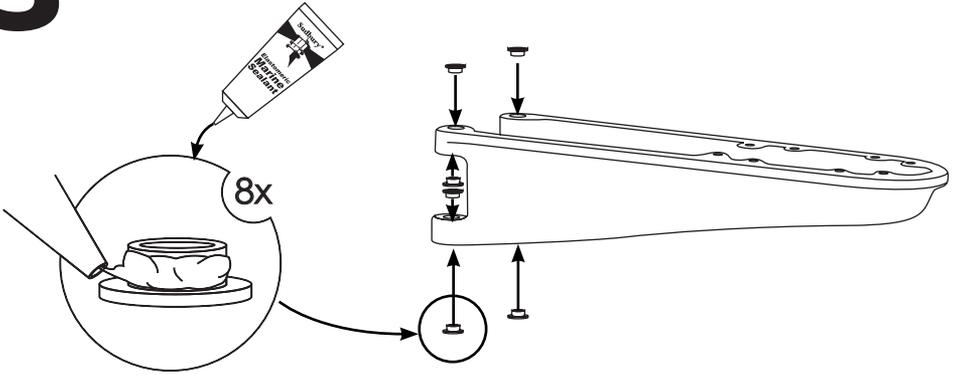


4

Once all shoulder washers are inserted attach the two mast mount feet.

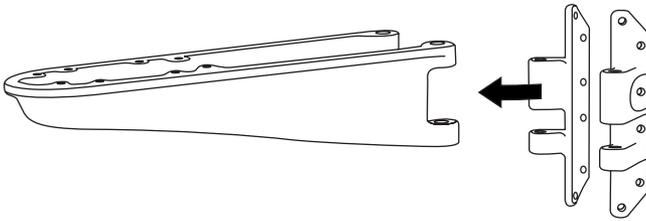


5


Insert the two bolts along with the three washers, two nuts and lanyard as shown below.

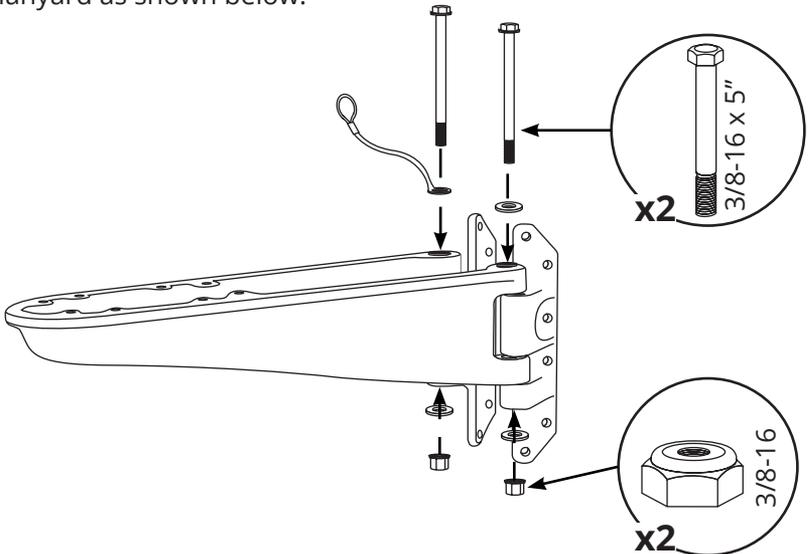


6 Once the feet are attached, place the assembly onto the mast.

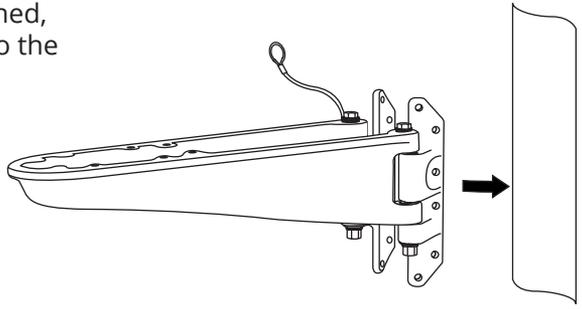

7 Make sure the assembly is level, then mark the top and bottom bolt hole with a pen.

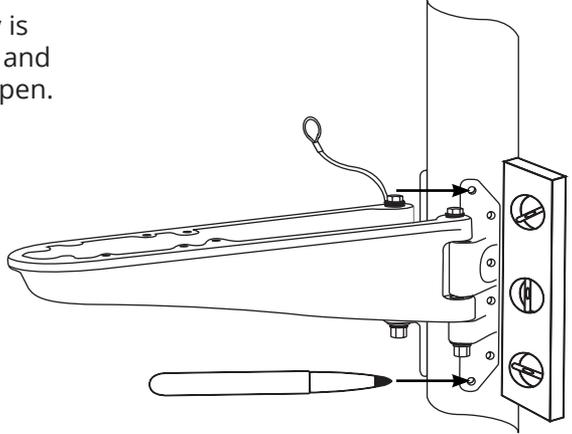


8 Once you've marked the four holes use a 3/16" drill bit to drill into the mast.

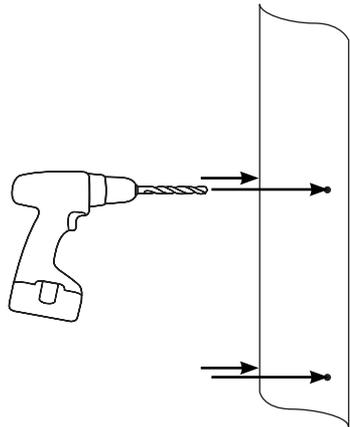


9

Using a 25mm hole saw, drill into the center of the mast to run our electronic cables.

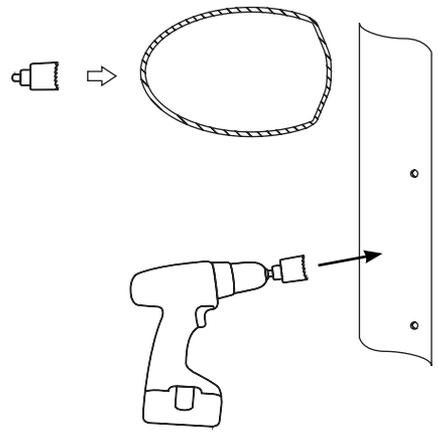


10

Apply marine adhesive sealant in the hole you just drilled. Be sure not to apply too much. Then insert the rubber grommet.

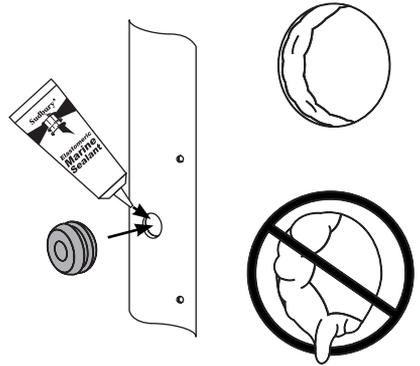


11

Apply Tef-Gel to the four holes you drilled for the mast mount feet. Again be sure not to apply too much.

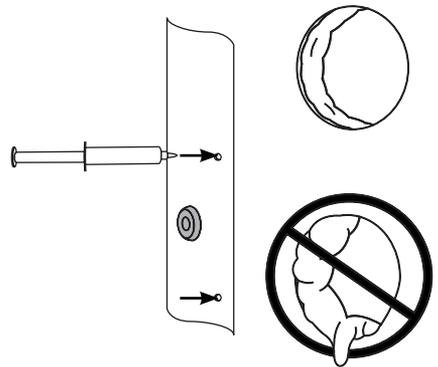


12

Secure the mast mount assembly to the mast using the supplied rivets.

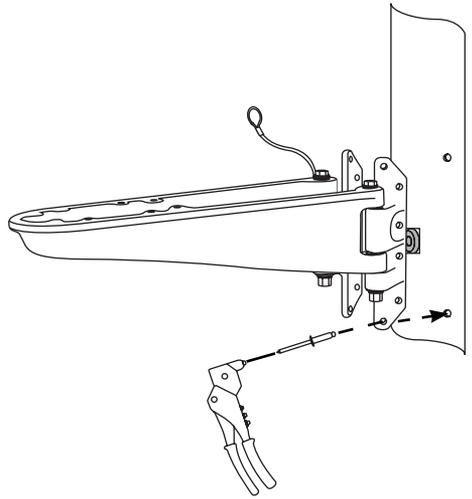


13

Using a 3/16" drill bit drill the remaining eight holes in the mast mount feet.

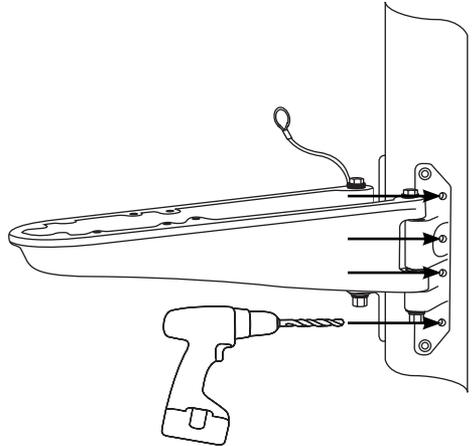


14


Apply Tef-Gel to the eight holes you just drilled.

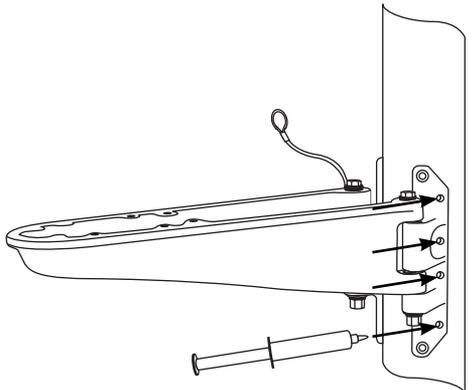


15 Insert the rivets into the remaining eight holes.

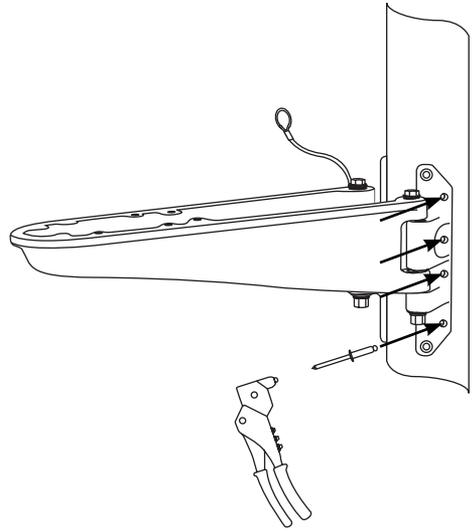

16 Mark two holes for the latch.

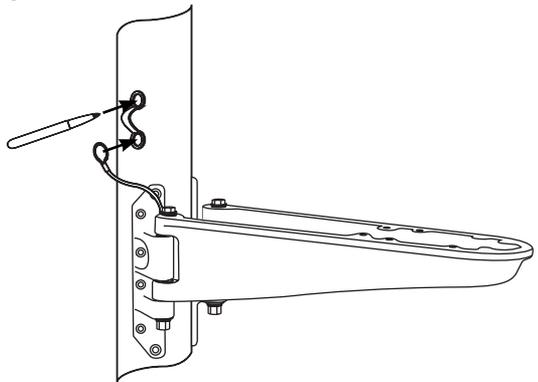


17 Using a 3/16" drill bit drill the two spots you just marked.

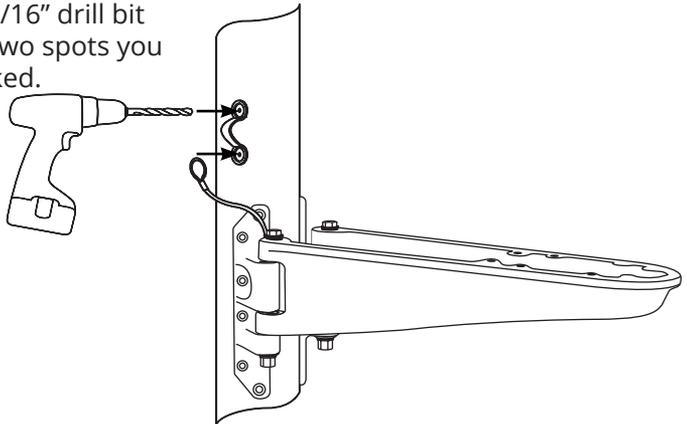


18

Apply Tef-Gel to the two holes.

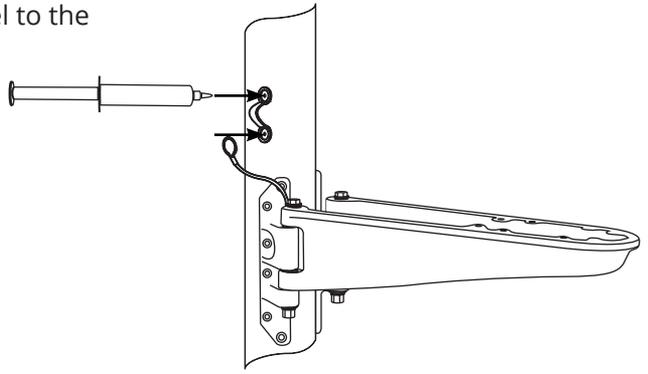


19

Secure the latch with two rivets. Make sure to loop the latch through the lanyard prior to securing the rivets.

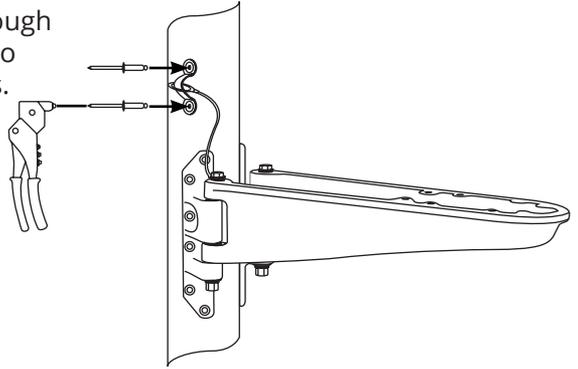


20

Use the eight 5/16 x 1" bolts to secure the adapter plate to the body of the mast mount.

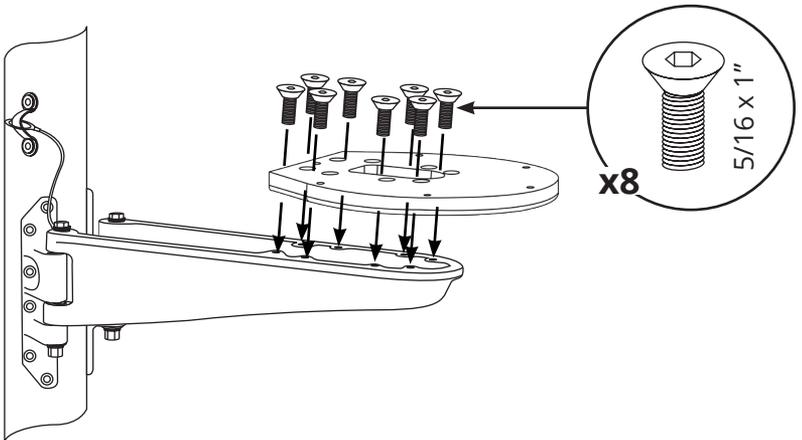

21

Bolt the top down riser to the adapter plate using the six M6 x 45mm bolts. The bolt will pass through the top down riser, through the adapter plate and then secure using a S.S. washer and nut.

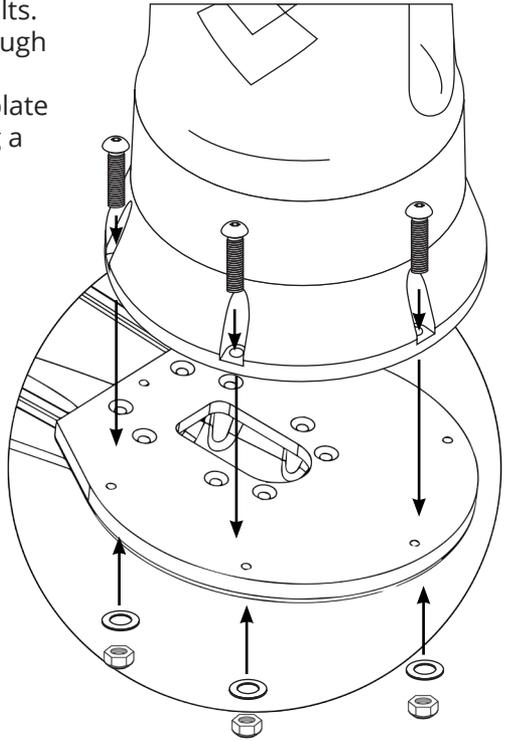

The background of the entire page is a light gray topographic map with white contour lines. The lines are irregular and wavy, representing elevation changes across a landscape. The map is centered and fills the entire frame.

SEAVIEW//
ELEVATE YOUR ELECTRONICS

SEAVIEW//

Tel: 800-655-7922
www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70
www.seaviewprogress.com

5-091 820