


Satcom/TV PowerTower – SATPT-60
Installation Instructions

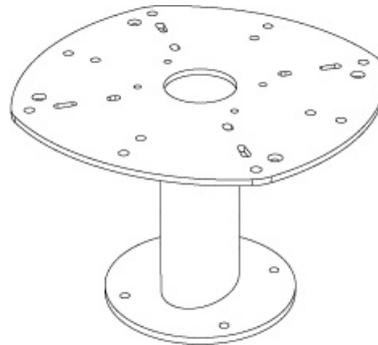


SATPT-60 kit contents

[]	1 x SATPT-60
[]	1 x Base Seal [19083]
[]	4 x Nylon Shouldered Washers [64004]
[]	2 x Scanstrut stickers [40113]

Also Required:

- 4 x M8 Stainless Steel bolts, large washers and nuts to attach SATPT to deck/arch. Length to suit deck/arch thickness.
- 8.5mm Drill.
- Hole Cutter for cable loom; 65mm[2.5"] dia.

Drilling Guide

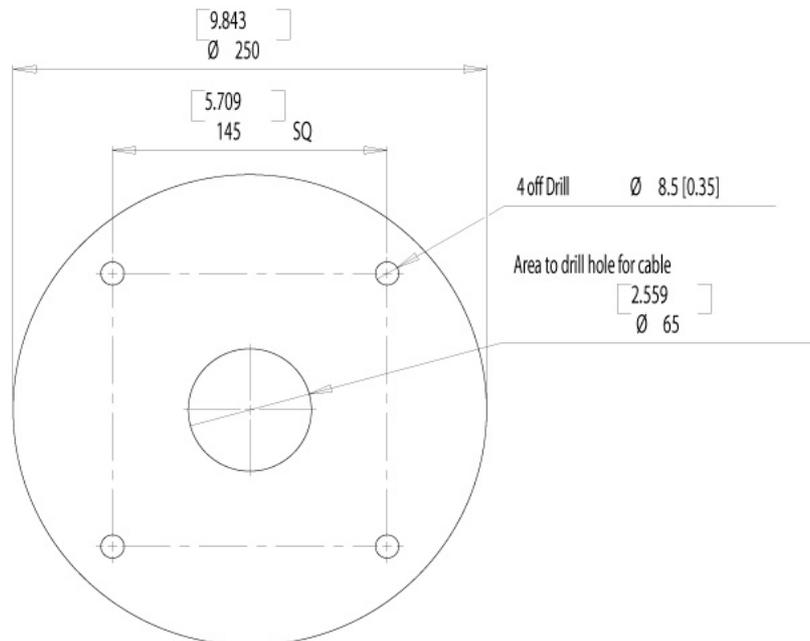

Fitting SATPT-60

1. Drill holes in arch to match SATPT-60 base and a central cable exit – See drilling guide.
2. Thread the cable loom up through the arch, base seal and into the SATPT-60.
3. Pull enough cable through the SATPT-60 and through the antenna's base seal to reach the antenna.
4. Once enough cable has been pulled through fasten the SATPT-60 to the arch, ensuring foam Base Seal is positioned under the SATPT-60 base.
5. With antenna sitting on it's base seal, fasten the antenna to the top plate with the bolts supplied and attach cable.