
SEAVIEW!

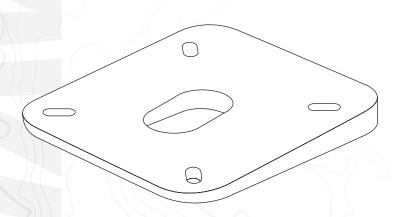

INSTALLATION INSTRUCTIONS


For Seaview Direct Mount Wedges:

RW41, RW42, RW43, RW44 RW45, RW46, RW47


Refer to website for most up to date instructions and videos.

WWW.SEAVIEWGLOBAL.COM


PARTS INCLUDED

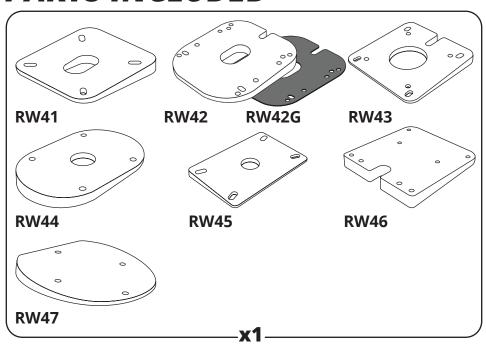


TOOLS NEEDED

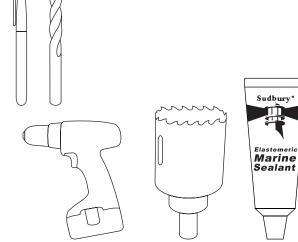


Sudbury Elastomeric Marine Sealant is recommended. To purchase call 800-655-7922 or visit www.seaviewglobal.com Place the wedge onto the mounting surface and mark all the holes.

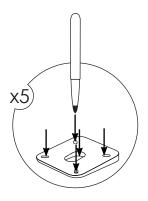


7 Drill the four bolt holes.

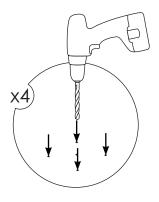


Use a hole saw to drill a center hole to run cables through.

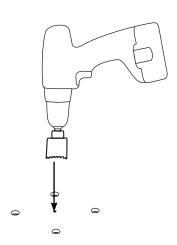

Apply marine adhesive sealant to all of the wedges except the RW42 (that particular wedge comes with a gasket). Then bolt the radar and wedge to the mounting surface.

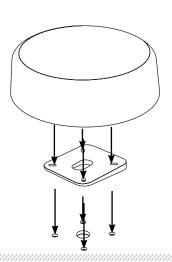


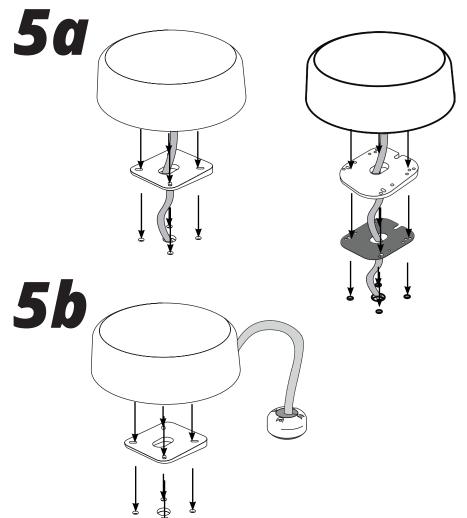

OPTIONAL ACCESSORIES

Call 800-655-7922 or visit www.seaviewglobal.com for available accessories.

CABLE SEALS

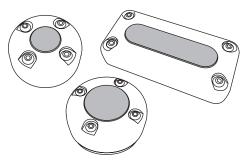

Seaview Cable Seals provide waterproof cable routing.



SEAVIEW//

Tel: 800-655-7922 www.seaviewglobal.com

EUROPEAN OFFICE

Tel: +33 4 94 53 27 70 www.seaviewprogress.com