

# Fusion™ MS-BB300 Installation Instructions

# **Important Safety Information**

## **△ WARNING**

Failure to follow these warnings and cautions could result in personal injury, damage to the vessel, or poor product performance.

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

This device must be installed according to these instructions.

Disconnect the vessel's power supply before beginning to install this product.

Before applying power to this product, make sure it has been correctly grounded, following the instructions in the guide.

#### **△ CAUTION**

Always wear safety goggles, ear protection, and a dust mask when drilling, cutting, or sanding.

#### NOTICE

When drilling or cutting, always check what is on the opposite side of the surface.

You must read all installation instructions before beginning the installation. If you experience difficulty during the installation, contact Fusion Product Support.

# **Software Update**

For best results, you should update the software in all Fusion devices at the time of installation to ensure compatibility.

Go to www.fusionentertainment.com/marine to download the latest software. See the manual for more information.

# **Mounting Considerations**

#### **△ CAUTION**

In high ambient temperatures and after extended use, the device enclosure may reach temperatures deemed dangerous to touch. Therefore the unit must be installed in a location where it will not be touched during operation.

#### NOTICE

This device should be mounted in a location that is not exposed to extreme temperatures or conditions. The temperature range for this device is listed in the product specifications. Extended exposure to temperatures exceeding the specified temperature range, in storage or operating conditions, may cause device failure. Extreme-temperature-induced damage and related consequences are not covered by the warranty.

- The device must be mounted in a location where it is not submerged.
- The device must be mounted in a location with adequate ventilation where it is not exposed to extreme temperatures.
- The device should be mounted so that the cables can be connected easily.
- To achieve IPX3 water ingress protection and optimal heat sink cooling, the device must be mounted on a vertical surface with the connectors pointing downward.
- The device can be mounted on a horizontal surface, but such positioning might not achieve IPX3 water ingress protection.

 To avoid interference with a magnetic compass, the device should be installed at least 203 mm (8 in.) away from a compass.

## **Mounting the Device**

#### NOTICE

If you are mounting the bracket on fiberglass with screws, it is recommended to use a countersink bit to drill a clearance counterbore through only the top gel-coat layer. This will help to avoid any cracking in the gel-coat layer when the screws are tightened.

Stainless-steel screws may bind when screwed into fiberglass and overtightened. Garmin® recommends applying an anti-seize lubricant to the screws before installing them.

Before you mount the device, you must select a mounting location and determine the mounting hardware needed for the surface.

**NOTE:** Mounting hardware is included with the device, but it may not be suitable for the mounting surface.

- 1 Place the device in the mounting location and mark the location of the pilot holes.
- **2** Drill the appropriate pilot hole for one corner of the device.
- 3 Loosely fasten the device to the mounting surface with one corner and examine the other three pilot-hole marks.
- 4 Mark new pilot-hole locations if necessary, and remove the device from the mounting surface.
- **5** Drill the appropriate pilot holes for the other three marks.
- 6 Secure the device to the mounting location.

#### **Connection Considerations**

The device must be connected to power, either the boat ignition or an external switch, a NMEA 2000° network, speakers, and media input sources to function correctly. You should carefully plan the layout of the device, the NMEA 2000 network, the speakers, and your input sources before making any connections.

#### **Connector Identification**



| Connector              | Connects to  |
|------------------------|--|
| ANT                    | External AM/FM antenna                                   |
| AUX IN 1               | Stereo line-level RCA auxiliary source                   |
| AUX IN 2               | Stereo line-level RCA auxiliary source                   |
| ZONE 3                 | Separate amplifier and speakers                          |
| SUB OUT                | Mono line-level subwoofer (tied to ZONE 3) for amplifier |
| WIRED REMOTE NMEA 2000 | Fusion NRX200i or NMEA 2000 network                      |
| SXM TUNER              | SiriusXM <sup>®</sup> tuner                              |
| USB                    | USB-compatible media device                              |
| 1                      | Power and speakers                                       |
| 2                      | Reserved for future use                                  |

### Wire Identification

| Wire Function | Wire Color | Notes   |
|---------------|------------|---|
| Power (+)     | Yellow     | This should be connected to a constant 12 Vdc source capable of supplying 15 A. |
| Ground (-)    | Black      |   |

| Wire Function            | Wire Color   | Notes  |
|--------------------------|--------------|--|
| Ignition                 | Red          | This should be connected to a separate switched 12 Vdc connection, such as an ignition bus, to turn the device on and off. If you are not using a switched 12 Vdc connection, you must connect this to the same source as the yellow (power) wire. |
| Amplifier on             | Blue/white   | This is connected only when using an external amplifier on ZONE 3 and on SUB OUT (optional).   |
| Mute                     | Brown/white  | When connected to ground, this mutes the audio or switches the input to AUX2. This is available in the settings menu.  |
| Speaker zone 1 left (+)  | White        |  |
| Speaker zone 1 left (-)  | White/black  |  |
| Speaker zone 1 right (+) | Gray         |  |
| Speaker zone 1 right (-) | Gray/black   |  |
| Speaker zone 2 left (+)  | Green        |  |
| Speaker zone 2 left (-)  | Green/black  |  |
| Speaker zone 2 right (+) | Purple       |  |
| Speaker zone 2 right (-) | Purple/black |  |

## **Connecting to Power**

When connecting the stereo to power, you must connect both power wires. The yellow power wire should be connected directly to the battery, or connected using a 15 A isolator switch. This provides power to the stereo and a constant trickle-power standby feed. The red signal wire should be connected to the same battery through the ignition or another manual switch to turn the stereo on and off.


If you are not routing the red wire to the ignition or another manual switch, you can connect the yellow to the red, and connect them to the positive (+) battery terminal. You should put a fuse on the red wire.

If it is necessary to extend the yellow power and black ground wires, use 14 AWG (2.08 mm<sup>2</sup>) wire. For extensions longer than 1 m (3 ft.), use 12 AWG (3.31 mm<sup>2</sup>) wire.

If it is necessary to extend the red signal wire, use 22 AWG (0.33 mm<sup>2</sup>) wire.

**1** Route the yellow power ① and black ground ② wires to the battery and route the wiring-harness plug to the stereo.

Do not connect the wiring harness to the stereo until all of the bare wire connections have been made.

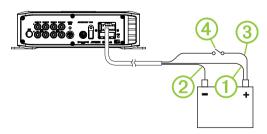

- **2** Connect the black wire to the negative (-) battery terminal.
- 3 Select an option:

- Connect the yellow wire to the positive (+) battery terminal, and route the red signal wire ③ to the ignition or another manual switch ④.
- Connect the yellow wire to the red, and connect them to the positive (+) battery terminal.

## **NMEA 2000 Connection Considerations**


#### **NOTICE**

If you purchased the stereo and remote as a bundle (Fusion MS-BB300R), do not use the included adapter cable (CAB000862) to connect the Fusion BB300 stereo to an existing NMEA 2000 network. Existing networks are normally powered separately. You must obtain a non-powered drop cable (CAB000863) from Fusion to connect to existing NMEA 2000 networks.

The Fusion MS-BB300 stereo can connect to an existing NMEA 2000 network or to a Fusion NRX200i remote control. Through the NMEA 2000 network, you control the Fusion MS-BB300 device using a compatible chartplotter or Fusion NRX200i remote control.

The Fusion MS-BB300R stereo and remote bundle package includes the cables needed to connect the Fusion BB300 stereo to a stand-alone Fusion remote control network. If you need to connect the Fusion MS-BB300R stereo and remote bundle to an existing NMEA 2000 network, you must obtain a non-powered drop cable (CAB000863) from Fusion.

The Fusion MS-BB300 stereo package includes a NMEA 2000 drop cable to connect the Fusion BB300 stereo to an existing NMEA 2000 network. A standard NMEA 2000 drop cable is not compatible with the connector on the device, although the included cable can be extended to a maximum length of 2 m (6 ft.) using a standard NMEA 2000 cable.

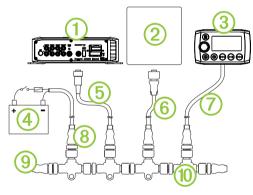

| Item | Description   |
|------|---|
| 1    | Fusion BB300 device   |
| 2    | Compatible chartplotter   |
| 3    | Fusion NRX200i remote control   |
| 4    | 12 Vdc power source with an ignition or in-line switch  |
| (5)  | Fusion BB300 NMEA 2000 drop cable This can be extended to a maximum length of 2 m (6 ft.) using a standard NMEA 2000 cable.         |
| 6    | NMEA 2000 drop cable  |
| 7    | Fusion NRX200i remote control drop cable. This can be extended to a maximum length of 2 m (6 ft.) using a standard NMEA 2000 cable. |
| 8    | NMEA 2000 power cable   |
| 9    | NMEA 2000 terminator or backbone cable  |
| 10   | NMEA 2000 T-connector   |

## **Subwoofer Connection Considerations**

This device supports output to a powered subwoofer from ZONE 3 (optional).

The subwoofer port on the device outputs a mono line-level signal from both RCA connectors. The port output audio level is linked to ZONE 3.

- If your subwoofer amplifier has two RCA input connectors, you should connect both connectors to the device.
- If your subwoofer amplifier has one RCA input connector, you
  can connect it to either subwoofer output RCA connector on
  the device, because the two RCA subwoofer outputs are
  parallel.
- Because the subwoofer output is linked to the ZONE 3 output, you must connect the blue wire from the wiring harness to the subwoofer amplifier to provide a signal to turn it on.

#### **Speaker Amplifier Connection Considerations**

In addition to the two stereo speaker zones available through the wiring harness, this stereo can be connected to a separate amplifier and speakers through the ZONE 3 connection (optional).

- The blue wire from the wiring harness must be connected to the amplifier to provide a signal to turn on the amplifier with the stereo. If it is necessary to extend this blue signal wire, use 22 AWG (0.33 mm²) wire.
- The audio output is a stereo line-level output over standard RCA cable.


# Installing the USB and 3.5 mm Socket

The USB and 3.5 mm socket is provided only with the Fusion MS-BB300R stereo and remote bundle. You may purchase the USB and 3.5 mm socket as an accessory (MS-CBUSB3.5).

Before installing the socket, make sure the cables will reach the mounting location and the ports on the back of the device. If needed, the RCA cables can be extended using a standard stereo RCA extension cable.

To allow for a proper seal, the mounting surface should be no thicker than 15 mm (  $^{5}$ /  $_{8}$  in.).

1 Remove the nut ① from the socket and separate it from the connected cable by pulling through one connector ② at a time.

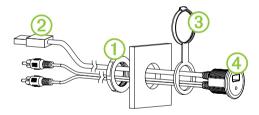

Do not remove the protective cover (3) from the socket.

- 2 Mark the mounting location of the socket and drill a 30 mm (1 <sup>3</sup>/<sub>16</sub> in.) hole through the mounting surface.
- **3** From the front of the mounting surface, feed the cables through the hole by inserting one connector at a time, and pull the cables through until the socket rests in the hole.

To ensure proper orientation, the USB socket  $\ensuremath{\textcircled{4}}$  should be on the top.

- **4** Place the nut over both the USB and 3.5 mm audio cables, thread it along the cables to the USB and 3.5 mm socket, and fasten the socket to the surface.
- 5 If necessary, route the USB cable to the stereo and connect it to the USB port.
- 6 If necessary, route the 3.5 mm connector cable to the stereo and connect it to the AUX IN 1 or AUX IN 2 port.

#### Stereo Information

#### **Specifications**

| General                |   |
|------------------------|---|
| Dimensions (L × W × H) | 99.6 × 235 × 66 mm (3.94 × 9.25 × 2.63 in.)                                     |
| Weight                 | 0.88 kg (1.96 lb.)  |
| Water resistance       | IPX3: Protected against spraying water when tilted up to 60 degrees vertically. |
| Operating temperature  | From 0 to 50°C (from 32 to 122°F)   |
| Storage temperature    | From -20 to 70°C (from -4 to 158°F)   |
| Input voltage          | 10.8 to 16 Vdc negative ground  |
| Fuse rating            | 15 A  |
| NMEA 2000 LEN          | 1 (50 mA)   |
| Compass-safe distance  | 203 mm (8 in.)  |

| Audio Amplifier  |                          |
|--|--------------------------|
| Output music power per channel   | 50 W                     |
| Total output music power   | 200 W                    |
| Speaker impedance  | 4 Ohm per channel        |
| Total harmonic distortion (1 W output, 4 ohm load, from 20 Hz to 20 kHz) | 0.04 typical < 0.1% max. |
| Pre-output voltage   | 3 V peak                 |
| Current (standby with ignition off)                                      | < 3 mA                   |
| Current (max.)   | 15 A                     |
| Current (muted)  | < 800 mA                 |

| Inputs and Outputs       |  |  |
|--------------------------|--|--|
| AUX IN 1 and<br>AUX IN 2 | RCA stereo line input for sources such as CD, DVD, and MP3 player  |  |
| ZONE 3                   | RCA stereo line output   |  |
| SUB OUT                  | RCA dual mono line output (ZONE 3)   |  |
| ANT                      | Motorola connector (standard AM/FM antenna connector)  |  |
| USB                      | USB-A industry standard Compatible with USB flash drives audio playback with supported audio formats and MTP devices USB works with iPod touch® (2nd through 5th generation), iPod classic®, iPod nano®(4th through 7th generation), iPhone® 5, iPhone 4s, iPhone 4, iPhone 3Gs, iPhone 3G |  |

| Tuner                          | Europe and<br>Australasia | USA                | Japan        |
|--------------------------------|---------------------------|--------------------|--------------|
| FM radio<br>frequency<br>range | 87.5–108 MHz              | 87.5–<br>107.9 MHz | 76–90 MHz    |
| FM frequency step              | 50 kHz                    | 200 kHz            | 50 kHz       |
| AM radio<br>frequency<br>range | 522–1620 kHz              | 530–1710 kHz       | 522–1620 kHz |
| AM frequency step              | 9 kHz                     | 10 kHz             | 9 kHz        |

## Registering Your Fusion MS-BB300

Help us better support you by completing our online registration today.

- Go to www.fusionentertainment.com.
- Keep the original sales receipt, or a photocopy, in a safe place.

#### **Getting the Owner's Manual**

You can get the latest owner's manual and translations of manuals from the web.

- **1** Go to www.fusionentertainment.com/marine.
- Select your product.
- 3 Select Manuals & Downloads.

4 Select a manual.

Garmin®, the Garmin logo, and the Fusion™ logo are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Fusion and FUSION-Link™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Apple®, the Apple logo, iPod®, iPod touch®, iPod classic®, iPod nano®, and iPhone® are trademarks of Apple Inc., registered in the U.S. and other countries. Android® is a trademark of Google Inc. Bluetooth® are owned by the Bluetooth SIG, Inc. and any use of such marks by Garmin is under license. NMEA®, NMEA 2000®, and the NMEA 2000 logo are registered trademarks of the National Marine Electronics Association. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved. Other trademarks and trade names are those of their respective owners.

Made for iPhone 5, iPhone 4s, iPhone 3GS, iPhone 3GS, iPhone 3G, iPod touch (2nd through 5th generation), iPod classic, and iPod nano (4th through 7th generation).

"Made for iPod and iPhone" means that an electronic accessory has been designed to connect specifically to an iPod or an iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with an iPhone may affect wireless performance.











